



System Includes:

- (1) motor pole
- (2) line anchor poles
- (1) motor bracket assembly pivot arm
- (2) 35 foot lines with shock cord and clips on easy reel
- (14) decoy bands
- (1) jumbo battery band
- (1) 12V Battery
- (1) 12V battery charger
- (1) duffel bag carry case

STEP ONE:

Place the charged battery onto the battery tray. Secure with jumbo band.

STEP TWO:

 
Snap together the (3) two-piece poles.

STEP THREE:

Place the motor pole (the wider pole) in desired location. Slide the motor bracket on the pole and tighten knob so pivot arm sits just out of the water.

STEP FOUR:

Attach one of your decoy lines to the motor arm swivel. Unwind shock cord and place loop over anchor pole. Put slight tension on the shock cord. Repeat process for the second line.

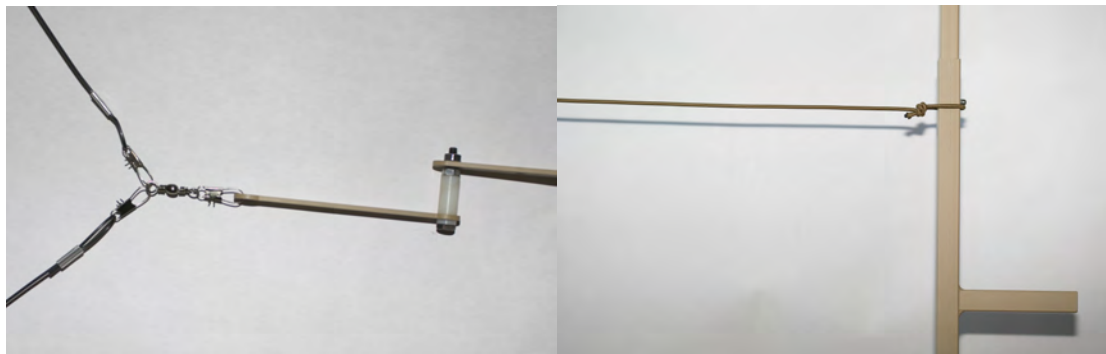

STEP FIVE:

Attach decoys. Place rubber bands on line in desired location pull tight.



STEP SIX:

Attach decoys by placing loop of elastic band around the keel. For smaller keel decoys, tie a knot in the rubber band so it's snug on the decoy. **IMPORTANT:** It is crucial that the decoy bands have a snug fit onto keels to prevent wear.



STEP SEVEN:

Lower the motor so pivot arm is just under the water.

Connect battery; at anchor poles adjust tension for desired movement by simply moving anchor pole closer in or further out. The tighter the line is the more movement you will get .

 
The motor is designed to run hundreds of hours if properly maintained. **DO NOT OVERTIGHTEN THE LINES.** Do not run more than (12) decoys. If you hear the motor struggling, your line is too tight.

THERE ARE THREE JERK ADJUSTMENTS:



OPTION ONE

With a small bolt closest to the motor going through both arms will give you a slow and constant motion in your spread.

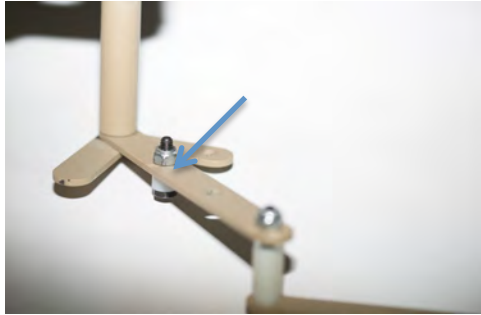

OPTION TWO

With the bolt going through the long arm hole closest to the motor will give you constant motion in your spread with an added jerk pulse.



OPTION THREE

With the bolt going through the hole on the V arm and not the long arm, will give you constant motion within your spread with a bigger jerk pulse. **This system is delivered to the owner in this setting and highly recommended to try before changing.**

TIPS + MAINTINENCE:

- Mixing different style decoys add a realistic look to your spread.
- Skimming style ducks with heads down/ duck butts are highly recommended.
- Adding 1 spreader (sold separately) to each line will give your spread more depth and a more natural look.
- This system is designed to hold up to 12 decoys.
- Periodically check your decoy bands for wear.
- Additional replacement parts can be purchased at autojerkdecoysystem.com



Apply two drops of gun oil or a shot of WD-40 once every couple weeks on the top motor shaft to insure peak performance.

WARNING: KEEP BODY PARTS CLEAR OF ALL MOVING PARTS. TO AVOID INJURING YOUR DOG, RUNNING THROUGH THE SYSTEM PLACE YOUR POLES ABOVE WATER LEVEL. ALWAYS PROTECT YOUR BATTERY FROM SHORTING OUT WHEN IN THE DUFFEL BAG CARRY CASE.



AUTO JERK DECOY SYSTEM LIMITED WARRANTY

Auto Jerk Decoy System warrants the Auto Jerk Decoy System from defects in craftsmanship and defective parts. The Warranty stands for one year from date of purchase and defective items must be returned with the original receipt.

Damage to products due to negligence or misuse by customer voids the warranty. Decoy bands are not covered by the warranty due to the fact that they will wear over time. Replacement bands can be ordered online.

Using this system in salt water voids the warranty.

*Auto Jerk Decoy System is not responsible for shipping costs from customer to company.

Auto Jerk Decoy System
6910 E Peltier Road
Acampo, Ca 95220

www.autojerkdecoysystem.com | autojerkdecoysystem@gmail.com